

Congratulations to your choice of a Dometic Wine Cellar !

Operating and Installation Instructions for your Dometic Wine Cellar

Introduction

Thank you for choosing the Dometic Wine Cellar. Please read the following instructions carefully before installing your new wine cellar. We trust you will be completely satisfied with your purchase.

The wine cellar must be installed and used according to these instructions in order for it to operate correctly and economically.

Transit damage

Inspect the wine cellar for transit damage. You must report any damage the company responsible for the delivery within the legal or stated time for this type of product. If there is no such established report time, the damage must be reported within seven days of delivery.

Accessories

Please check that the following accessories are attached to the wine Cellar or in the separate cardboard box for accessories which is placed inside the wine Cellar.

At the back:

1. Distance bar (to ensure distance to wall behind)
2. Tilt protection wire

Accessories box:

1. Instruction manual
2. Handle
3. Drip tray
4. Shelf support
5. Keys
6. Washer
7. Storage shelf

Necessary additional tools not included



1. Screwdriver (star quad)
2. Adjustable spanner or fixed spanner (20mm)

Data plate

Check the data plate, inside the wine cellar at the top left, to ensure you have received the right model.

The data plate shows details that you will need to quote if you have to contact service personnel. It is a good idea to make a note of them here.

Model designation
Product number
Serial number
Voltage

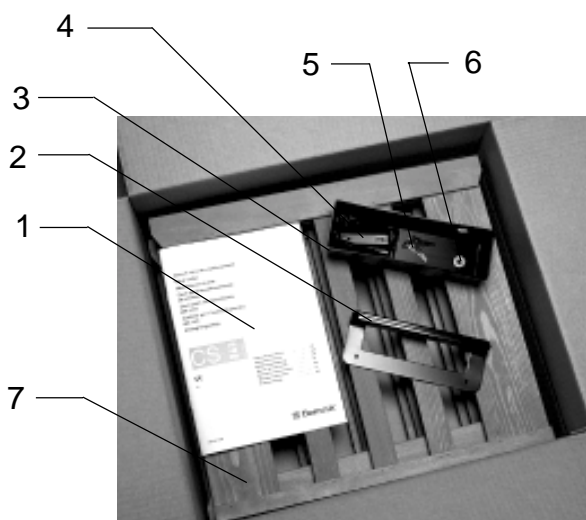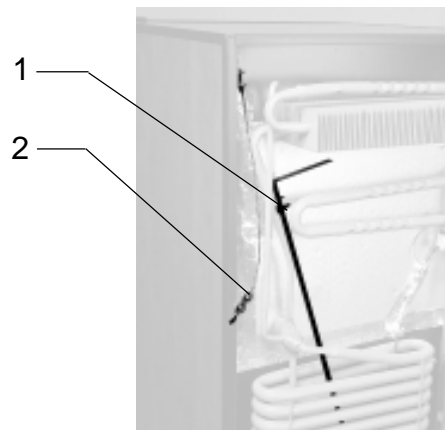


Installation

Please follow these installation instructions:

For best performance, air needs to circulate freely over the cooling unit behind the wine cellar. The free-standing design of the cellar means that it should stand at least 25 mm from the rear and side walls. Allow a clearance of at least 100 mm above the wine cellar.



Adjust the feet of the wine cellar so that it stands in a vertical position in both directions. Use a spirit level if necessary. FIG.1

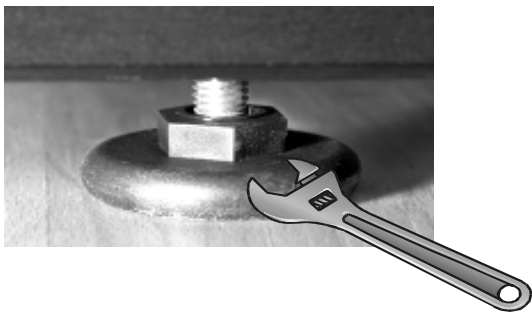

1. Remove the transport pallet on which your wine cellar rests.
2. **IMPORTANT!** Adjust the feet to allow a 30mm clearance under the wine cellar
3. Attach the distance bar using the two screws at the top back on each side of the cellar. The rod ensures the correct distance to the wall behind. FIG 2.
4. For optimum performance, please place your wine cellar far away from any source of heat (radiator, cooker or intense sunlight) .



FIG 2

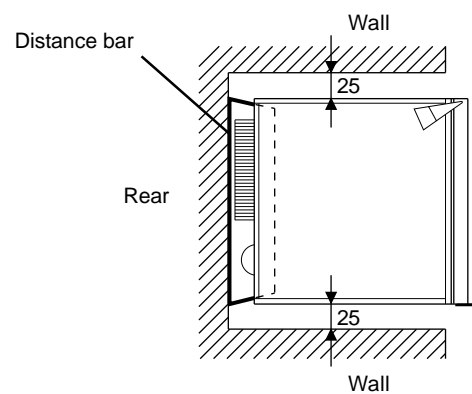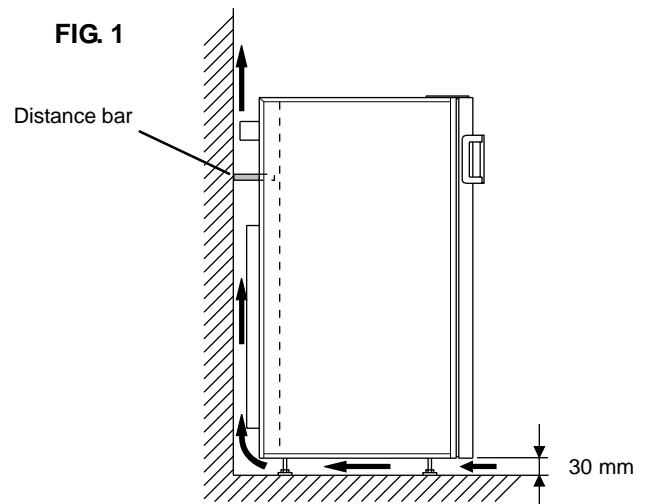

5. Check that the charcoal filter is in place at the top left corner inside the wine cellar.
6. Fit the door handle to the door. The door frame has pre-drilled holes on its side(s). FIG 3

Please note that it must be possible to open the wine cellar door at least 90° to allow the sliding shelves to be pulled out.

*** IMPORTANT WARNING !**



7. Secure the wine cellar to the wall behind (see FIG 4 side 5)
8. Attach the driptray on the back as shown on the pictures FIG 5a , 5b , 5c. on side 5. The screws are already attached at the back.



FIG 3

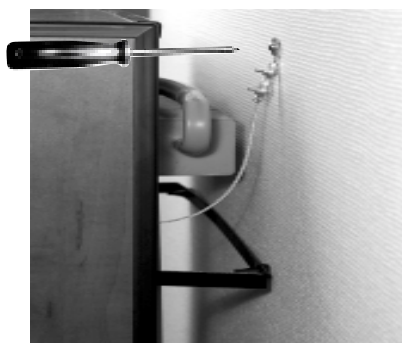


FIG 4



FIG 5a



FIG 5b

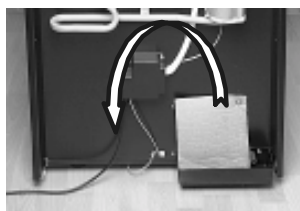


FIG 5c

Electrical connection.

It is essential that the electrical installation is carried out correctly, and according to all relevant regulations and codes of practice. Your wine cellar operates on a single phase alternating current.

Please check that the voltage shown on the data plate corresponds to your power supply.

WARNING – THE WINE CELLAR MUST BE EARTHED.

The wine cellar is fitted with a plug intended for an earthed socket. Dometic and its subsidiaries will not be held responsible for any incident due to non-existent or defective earth wires.

Electrical leads must be routed and secured so that they cannot come into contact with hot or sharp parts of the wine cellar.

Plug in the wine cellar and turn it on with the S1 switch (see FIG. 6).

Temperature setting

(see FIG. 7)

The wine cellar is equipped with an electronic control. This allows you to programme the temperature inside the wine cellar. Your wine will be stored between 10°C and 15°C according to expert advice. The temperature pre-set in the factory is shown on the display.

The temperature, [pre-set at 12°C], can be changed on demand between 8° and 18° depending on the wine stored.

1. Press button [1] (see FIG. 7). Message L1 will appear and the pre-set temperature is blinking shortly afterwards.
2. Use buttons [2] and [3] (see FIG 7) to lower or increase the temperature.
3. Please allow 6 seconds for the control system to record the new pre-set value.



FIG 6

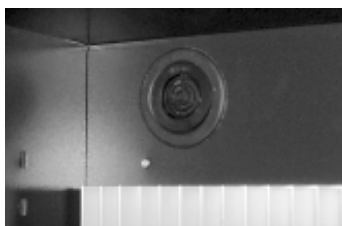


FIG 7

Maintenance

We recommend that you keep your wine cellar as clean as possible. Unplug the cellar before cleaning. Do not use any abrasive or strong scented substances. Use a smooth cloth or sponge and light detergent. It is very important to check regularly that the air circulation underneath and behind the cellar is not blocked. Condensation collects in a small cup at the back of the cellar. The cup has a sponge which helps the condensation to evaporate. Check that the plastic pipe routing the water from the inside to the cup is not blocked by dust or dirt.

You should replace the inside ventilation charcoal filter every second year. The filter is fitted in the upper left corner inside the wine cellar.



If the wine cellar fails to work, check the following before calling a service technician:

- that the fuse of power supply is intact
- that the plug is properly inserted in its socket
- that the wine cellar is switched on

If the cause of failure is not listed above, an authorised service technician must be called for.

The wine cellar is equipped with overheating protection.

An authorised service technician can check whether this has been triggered or not.

Storing the wine .

Please see illustrations in on side 7.

Bottles should be stored in your wine cellar according to their size. The most known bottles are the “Bordeaux” and the “Burgundy”. These bottles are not all identical. The most widely recognised bottles are the “Tradition” and the “Légère”. The “Champenoise” and the “flûte d’Alsace” bottles have different diameters and heights. Take these differences into account when storing your wine and avoid mixing the bottles.

It is important to store bottles on their side in order for the cork to remain in contact with the wine. Place bottles top to bottom in the cellar for optimum volume use. Our illustrations show the best way to stack the “Burgundy” and the “Bordeaux Tradition”.



NOTE that you should store no more than one layer of bottles on the sliding shelves.

The sliding shelves and the storage shelves can be placed in several positions depending on the size of your wine cellar. FIG 8 & 9

Model	Max. no. of sliding shelves
CS 110 – CS 115	8 woodendoor / 9 glassdoor
CS 160 – CS 165	12
CS 200 – CS 205	16

Each kit contains **two** shelves and shelf supports.

Sliding shelf kit number: 921 17 81-99

Storage shelf kit number: 921 17 81-98

The maximum number of Bordeaux tradition bottles that can be stored in a wine cellar that is fitted with storage shelves and one sliding shelf:

Model	No. of storage shelves	No. of bottles
CS 110 – CS 115	2	116
CS 160 – CS 165	3	170
CS 200 – CS 205	4	206

Installation of guides and shelf supports

Installing guides for the sliding shelves by placing the rear hook of the guide in front of the desired hole in the rear row (Arrow 1 FIG 8) push in the direction of the arrow. Then do the same with the front hook (Arrow 2 FIG 8) .



FIG 8

Installation of shelf support for storage shelf. Place the support hooks in the holes at desired level, press in as arrow 1 indicates and push down as arrow 2 indicates see FIG 9

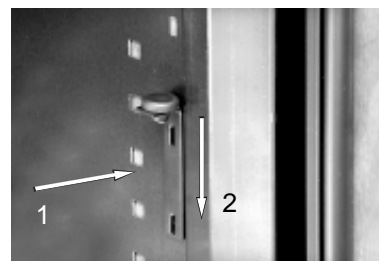


FIG 9

NOTE ! The reinforcement bar is a shelf support and must not be removed for safety reasons.



Reinforcement bar



Cave à vins de vieillissement

Wine cellar

Weinklimaschrank

**Cave para envelhecimento
de vinhos**

**Cava para envejecimiento
del vino**

**Cantina per l'invecchiamento
dei vini**

Vinlagringskåp



C...

Notice d'instructions	FR
Instruction manual	GB
Bedienungsanleitung	DE
Manual de instruções	PT
Manual de instrucciones	ES
Manuale di istruzioni	IT
Bruksanvisning	SE

 **Dometic**